

# Axiom 25™ INSTRUCTIONS



## The Uniform Axiom 25™ Caulk Line

### ITEMS REQUIRED


- Axiom 25™ Translucent Silicone
- Caulk Gun
- Spray gun containing denatured alcohol
- Square laminate chips with one corner rounded over
- Rags and/or paper towels

1




Take a laminate chip with square corners and round over one corner to desired size of the cove you want to create in the caulk. (Have several handy.)

2

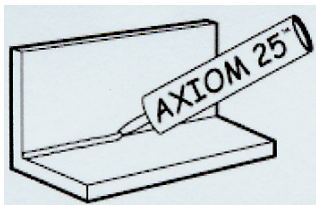

Start with a clean edge or seam. Using Axiom 25™ translucent silicone, caulk your edge to the smallest bead desired.


3

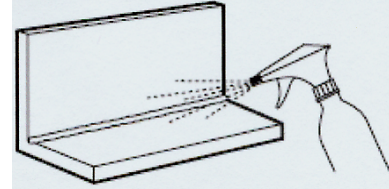

Spray caulk line with typical household window cleaner or household spray detergent, ie: Fantastic.\* (This will slow the curing process of the silicone and keep excess silicone from adhering to other areas of the material.)

4 Take a rag or paper towel in one hand and hold the laminate chip in the other. Place the rounded corner in the caulk having the straight sides of the laminate chip.

5

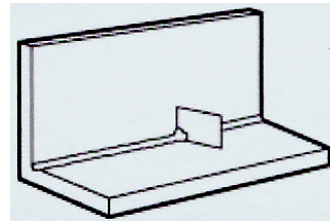

Pull laminate chip along the caulk line in one direction. Wipe off excess onto rag or paper towel at 6"-10" or when excess builds up on chip.

6 Continue process starting  $\frac{1}{2}$ " to 1" behind where you left off until finished.

### RESULTS

A uniform caulk line with no mess.

\* By painted, or wall papered areas, use a liquid glass cleaner or a liquid cleaner instead.

### MASTER DISTRIBUTOR

Kampel Enterprises, Inc.  
8930 Carlisle Road, P.O. Box 157  
Wellsville, PA 17365-0157  
PH: 800-837-4971 FAX: 800-778-7006  
website: [www.kampelent.com](http://www.kampelent.com)